

BALANZA de cocina DIGITAL 3Kg



TH-DS8022

Manual de Instrucciones

ES

EN



Balanza de Cocina

Modelo: TH-DS8022

Por favor, lea cuidadosamente este manual antes de usar este producto por primera vez.

Guarde el manual para futuras consultas.

Estimado cliente

Agradecemos la confianza depositada en nosotros al adquirir este producto THULOS®. Nuestro principal empeño es ofrecer artículos excelentes, manteniendo los más estrictos controles de calidad y cumpliendo todas las normativas vigentes de seguridad, con el objetivo de presentar un producto perfecto y seguro para el uso doméstico.

Lea detenidamente el presente manual de instrucciones y guárdelo para posterior consulta. En caso de entregar el aparato a terceros, entregue también el presente manual de instrucciones.

Lea detenidamente todas las instrucciones antes de usar el aparato.

SEGURIDAD

1. Si ignora las instrucciones de seguridad, eximirá al fabricante de toda responsabilidad por posibles daños.
2. Ponga la balanza en una superficie dura y estable.
3. La capacidad máxima de la balanza es de 3kg.
4. La balanza es un dispositivo de medición de la alta precisión. Nunca la golpee fuertemente o trate de desmontarlo y por favor, manejarla cuidadosamente para evitar que se caiga o rompa durante el movimiento.
5. La balanza es para uso doméstico solamente y no para uso profesional.
6. Compruebe la pila si la balanza funciona mal. Cambie a una nueva si es necesario. Para otros problemas, póngase en contacto con el servicio técnico por correo electrónico.

Pila:

- No exponga la pila a altas temperaturas ni a la luz solar directa. Nunca arroje las pilas al fuego. ¡Existe el peligro de explosión!

- Mantenga las pilas lejos de los niños. ¡No se trata de un juguete!
- No abra las pilas por la fuerza.
- Evite el contacto con objetos metálicos (anillos, clavos, tornillos, etc.). ¡Existe riesgo de cortocircuito!
- Como consecuencia del cortocircuito, las pilas pueden calentarse considerablemente o incluso arder, lo que podría provocar quemaduras.
- Para su seguridad, los polos de la pila deberán cubrirse con tiras adhesivas durante el transporte.
- Si una pila tiene fugas, impida que los líquidos entren en contacto con sus ojos. Si ocurre, lávelos íntegramente con agua limpia. Si los síntomas persisten, consulte a su médico.

CARACTERÍSTICAS PRINCIPALES

- Con sistema de sensores de tensión de alta precisión que garantiza resultados de pesaje más precisos.
- Peso MAX. /MIN.: 3kg / 1g.
- División: 1g.
- Función de tara.
- Apagado automático.
- Indicación de batería baja y sobre carga.
- Interruptor para cambiar entre las unidades distintas unidades de peso.
Funciona con 1 × 3V CR2032 batería de litio (incluida).


BOTONES



Tecla ON / TARA: encendido, apagado y función de tara UNIDAD: Intercambio de unidades de peso.

OPERACIÓN

Funciona con una pila de litio CR2032 (incluida). En la parte trasera de la balanza se encuentra el soporte de la batería, abra la tapa, instale la batería y cierre la tapa (asegúrese de que el polo positivo de la batería esté hacia arriba).

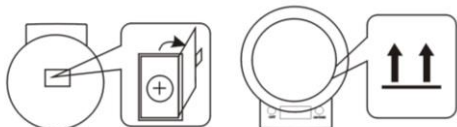

Coloque la balanza firmemente sobre una superficie plana y ponga su bol vacío encima. ● Pulse el botón "ON / TARE" para activar la báscula y estará lista para su uso cuando la pantalla LCD muestre "0g".



Pulse el botón "UNIT" y podrá elegir entre las dos unidades "g", "oz".



Ponga dentro del bol lo que desee pesar y el bol en la plataforma de la báscula. El peso se mostrará en la pantalla.



Pulse el botón "ON / TARE" cada vez que necesite poner a cero el peso. Puede ir añadiendo alimentos y pesar el nuevo alimento sin tener que sacar los que ya están dentro y pesados.



Continúe usando el botón "ON / TARE" para obtener el peso respectivo de más alimentos que vaya añadiendo.

APAGAR LA BALANZA

Presione el botón "ON / TARE" para que la balanza muestre en la pantalla "0g". Si la dejamos unos segundos sin tocarla ni pesar nada, la balanza se apagará automáticamente.

PRECAUCIÓN

Cambie la pila y sustitúyala por una nueva cuando aparezca "LO" en la pantalla, lo que indica que la batería está baja.

1. "EEEE" mostrado en la pantalla significa sobrecarga.



LIMPIEZA

No sumerja nunca el aparato en agua o cualquier otro líquido. El aparato no se puede lavar en el lavavajillas.

Limpie el aparato con un paño húmedo. No utilice productos de limpieza abrasivos o fuertes, estropajos o lana metálica porque se podría dañar el aparato.

CONDICIONES DE GARANTÍA

1. Este aparato está cubierto contra cualquier defecto de fábrica.
2. El aparato se cambiará siempre y cuando esté dentro del plazo de cambio y se devuelva con todos sus accesorios y embalaje.
3. La garantía será válida siempre y cuando el aparato vaya acompañado de su factura o ticket de compra donde salga reflejado el aparato, o también su tarjeta de garantía debidamente cumplimentada y sellada.
4. EL APARATO ESTARÁ EXENTO DE GARANTÍA (NO CUBIERTO) CUANDO:

- 4.1. El aparato tenga señales de golpes y/o caídas.
- 4.2. El aparato presente signos de mal uso.
- 4.3. El aparato presente signos de uso excesivo.
- 4.4. El aparato esté manipulado inadecuadamente.
- 4.5. No tiene documento acreditativo (tarjeta, ticket o factura compra).
- 4.6. El aparato no se ha usado según las instrucciones de uso.

ATENCIÓN

Este dispositivo puede ser sometido a cambios en las especificaciones, características y/o el uso sin notificación previa al usuario, a fin de continuar mejorando y desarrollando su tecnología.

NORMAS DE PROTECCIÓN DEL MEDIO AMBIENTE



Este aparato no se debe desechar con los residuos domésticos cuando finalice su durabilidad, sino que se debe ofrecer a un centro de reciclaje de aparatos eléctricos y electrónicos domésticos. Este símbolo en el aparato, manual de instrucciones y embalaje le avisa de este aspecto importante. Los materiales utilizados en este aparato se pueden reciclar. Mediante el reciclaje de electrodomésticos, usted contribuye a fomentar la protección del medioambiente. Consulte a sus autoridades locales para obtener información acerca del punto de recogida.



Kitchen Scale

Model: TH-DS8022

Before using, please read the instruction carefully.

For your safety and continued enjoyment of this product. Always read the instruction book carefully before using.

Dear Customer

We thank you very much for having purchased this THULOS® product. We kindly ask you to read and save this instruction manual.

Please read these operating instructions carefully and keep them in a safe place. If you pass the unit on to someone else, please give them these operating instructions as well.

Your compact Deep Fryer includes many features to enable safe and successful frying. The cool to touch exterior has been designed for additional safety. The variable thermostat allows the temperature control to be adjusted to ensure that food is fried to the exact degree of crispness required.

PLEASE ATTENTION

1. By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
2. Put the scale on hard and flat surface (clean flat table is best) and make sure it is steady before use.
3. The maximum capacity of the scale is 3kg, which is the weight before tare.
4. The scale is high precision measuring device. Never knock it heavily or try to disassemble it and please handle it carefully to avoid dropping or breaking during moving.
5. The scale is for family use only and not suitable for professional use.
6. Please check the battery if the scale malfunctions. Change a new one if necessary. For other problems, please contact the local dealer or our company directly by phone or E-mails.

Battery:

- Do not expose the battery to high temperatures or direct sunlight. Never throw batteries into the fire. There is a danger of explosion!
- Keep batteries away from children. They are not a toy!
- Do not open the batteries by force.
- Avoid contact with metallic objects.(Rings, nails, screws et cetera)there is a danger of short-circuiting!
- As a result of a short-circuit batteries may heat up consider-ably or even catch fire. this may result in burns.
- For your safety the battery poles should be covered with adhesive strips during transport.
- If a battery leaks, do not rub your eyes with your hands. If in contact with the liquid, the hands should be washed thoroughly and eyes rinsed out with clear water, if symptoms persist please consult a doctor.

KEY FEATURES

- High precision strain gauge sensors system ensures more accurate weighing results.
- Max. / Min.: 3kg / 1g.
- Division: 1g.
- Tare function.
- Auto power off.
- Low battery and over load indication.
- Switch within different units.
- Powered by 1×3V CR2032 lithium battery and one free piece CR2032 lithium battery is packed in the box.

ABOUT BUTTONS




ON/TARE key: power on, power off and tare function

UNIT Key: Unit exchange.

OPERATION

Find the lithium cell CR2032 in the packet and the battery holder at the back of the scale, open the cover, install the battery into the holder and cover it back (make sure the positive pole of the battery upwards).

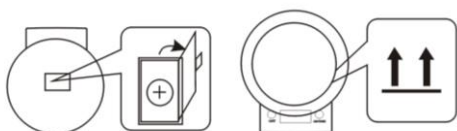

Place the scale steadily on hard and flat surface. Clean table is best.


Press the “ON/TARE” button to switch on the scale and it will get ready for use when the LCD screen shows “0g” after full display.




Press the “UNIT” button and you can choose among the two units “g”, “oz”.



Put the container or other things you want to weigh on the platform of the scale and the weight will be showed on the screen.



Press the “ON/TARE” button to clear the weight of the things on the platform and the screen will show “Tare” and “0g”. Then put the food into the container or add more things on the platform and the weight of the stuff you add will be displayed on the screen.



Continue to use the “ON/TARE” button and you can get respective weight of more things through repeating tare conveniently. And when all the stuff get removed off the platform, the total weight will be showed on the screen.



TO TURN OFF THE BALANCE

Press the "ON / TARE" button so that the balance show "0g" on the screen. If we leave it for a few seconds without touching or weighing anything, the balance will automatically turn off.

CAUTION

1. Please change a new battery when “LO” appears on the screen which indicates that the battery is out of power.



2. “EEEE” showed on the screen indicates overload.



CLEANING

- Never immerse the electrical device in water or any other liquid. The device is not dishwasher proof.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners,

scouring pad or steel wool, which damages the device.

WARRANTY CONDITIONS

1. This appliance is covered against any factory defects.
2. The device is changed for a new one as long as it is within the change period and is returned with all accessories and packaging in good condition.
3. The guarantee will be valid as long as the appliance is accompanied by your invoice or purchase ticket where the exact device and model, or your warranty card duly completed and sealed, is reflected.
4. THE APPLIANCE WILL BE EXEMPT FROM WARRANTY WHEN:
 - 4.1. The appliance has signs of knocks and / or falls.
 - 4.2. The appliance shows signs of misuse.
 - 4.3. The appliance has signs of overuse.
 - 4.4. The appliance is improperly handled.
 - 4.5. No supporting document. (Card, ticket or invoice).
 - 4.6. The appliance has not been used in accordance with the instructions for use.

ATTENTION

This unit/user's guide may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing to technology.

GUIDELINES FOR PROTECTION OF THE ENVIRONMENT



This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue.

The materials used in this appliance can be recycled. By recycling of used

domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.



IMPORTADO POR:

G.MOTIRAM S.L.
C/CIRO ALEGRÍA Nº45
(POL. IND. GUADALHORCE)
29004 - MÁLAGA
CIF: B-92953165
www.thulos.com



Verde: 8436550628708

Azul: 8436550628715

Blanco: 8436550628722

Negro: 8436550628739

TH-DS8022

Premium Quality Household products by Thulos

